

Wiring a Dual Stage STC 1000

You will need:

- STC 1000 controller 110v dual stage
- Power outlet
- Power cord (three wire)
- Extra wire
- Enclosure / cover



Be sure to break off tab on outlet's hot side, do not break off tab on neutral side.

Controller settings: (press and hold (S) button until display flashes- be sure to hit Power (P) to save settings)

- F1- Target Temp (in Celsius)
- F2- Temperature variation before controller turns on (default 0.3 C)
- F3- Compressor delay- Amount of time before controller will turn on again. This is so the power doesn't shut on/ off continually with small temperature fluctuations (helps save Fridge/ freezer compressors)
- F4- Temperature calibration

